



# Lifemax Talking Alarm Clock



**Thank you for purchasing the Lifemax Talking Alarm Clock. To get the best from your purchase, please carefully read the following instructions.**

## **965.1 Talking Alarm Clock**

Lifemax Ltd  
1 Pipers Court, Thattham  
RG19 4ER. United Kingdom.

**[www.lifemaxuk.co.uk](http://www.lifemaxuk.co.uk)**

**Helpline: 01635 874323**





## Getting started:

Remove the battery door, fit 2xAA batteries (observing the +/- signs) and replace battery door.

Press the 'RESET' key gently by using a long thin object (e.g. a straightened wire paper clip). This will clear any old settings.

Press the large top button to check that the talking function is working.

Please note that the talking function will only speak the time shown on the digital display.

Normally you would set the digital time and the hands at the same time, but you may prefer to use the two times to show different time zones.



## Set digital time

Press 'SET' repeatedly until the numbers flash and the 2 dots remain constant (Note: will return to non-set mode if no button pressed for 10 seconds).

Press 'HR' to move hours forward until correct hour displayed (check for AM or PM).

Press 'MIN' to move minutes forward until correct minutes are displayed.

Wait until the digits stop flashing (takes about 10 seconds). The time is now set.

## To set the alarm time

Press 'SET' repeatedly until numbers flash and 'AL' is shown on the display.

Press 'HR' to move hours forward until correct alarm hour displayed (check for AM or PM).

Press 'MIN' to move minutes forward until correct alarm minutes are displayed  
Wait until the digits stop flashing (takes about 10 seconds). The alarm time is now set.

[www.lifemaxuk.co.uk](http://www.lifemaxuk.co.uk)





### To switch alarm on/off

Press 'SET' repeatedly until the 'BELL' symbol is shown (alarm on) or not shown (alarm off).



When the alarm is ON, it will stop after one minute. To stop midway, press 'HR' or 'MIN'.

### To select alarm sound

In the normal time display mode press 'HR' repeatedly until the sound you want is played.

### To use snooze function

When the alarm sounds, press the top 'TALKING' key. The time will be announced once, and the alarm will stop and go into snooze mode then sound again after 10 minutes.

### To switch hourly chime on/off

In the normal time display mode press 'MIN' until the 'CHIME' symbol is shown (chime on) or not shown (chime off).



### To set the hands (analogue)

Use the adjust wheel on the clock back.

### To reset the clock

Under some environmental conditions, electrostatic discharge or radio frequency interference may cause your clock to malfunction.

Reset by using a long, thin object (e.g. straightened wire paper clip) to press the reset key gently.

After reset the clock time will need to be set-up again.

Helpline: 01635 874323





## Battery information

This product uses 2xAA size batteries (not included).

Alkaline manganese batteries are recommended.

Use only designated battery type. Do not use re-chargeable batteries or mix battery types. Alkaline manganese batteries recommended.

Read instructions carefully and install batteries correctly observing the +/- sign to avoid leakage.

Always replace sets of batteries at the same time. Do not mix old and new batteries.

Do not attempt to recharge non-rechargeable batteries.

Remove batteries from the product when it will not be used for an extended period of time to avoid leakage.

Remove exhausted batteries to avoid leakage.

Do not short out battery contacts.


Do not dispose of batteries in fire.

Do not immerse electrically operated products in water or other liquid.

Wipe clean only.

Please retain this information for future reference.

UK  
CA CE

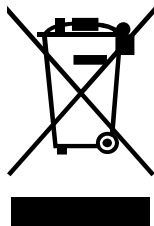

This is the WEEE symbol. It indicates that when the end-user discards this product, it must be sent to separate collection facilities for recovery and recycling.

By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved. Lifemax Ltd provide an end-of-life solution for this product when sold in the UK by accepting back any end of life items for processing by a local registered waste disposal company.

**Helpline: 01635 874323**

