



High Vision

SKU: 250+

Reading Lamp

Instruction Manual

Thank you for purchasing a Lifemax High Vision Reading Lamp. We hope you'll get many years of use from this product.

We recommend you read this document thoroughly to familiarise yourself with how your product works, how you should use it safely and effectively and how to look after your product to ensure it continues working as it should. Please be aware that this manual covers both the floor and table versions of this product.



Product Information

This High Vision Reading Lamp is specially designed using a near daylight bulb to give you the perfect light for reading, hobbies or close work.

The floodlight effect bulb delivers constant light to cover the maximum working area and prevent eyestrain and headaches.

Whats included...?

High Vision Floor Light

- Lamp Base with Cable and Plug
- Pole
- Lamp Neck with Installed Bulb
- 2 x Securing Screws
- Instruction manual.

High Vision Table Light

- Lamp Unit with Installed Bulb and Cable and Plug
- Instruction manual.

 
Any screw fixings will be packaged with the instruction manual. Please ensure that you have all components before disposing of packaging.

How to use...

Assembly

The bulb for both the table and floor light has been pre-installed but can become loose in transit.

After assembly, please check that the bulb is correctly seated (see diagram opposite) before using your lamp.

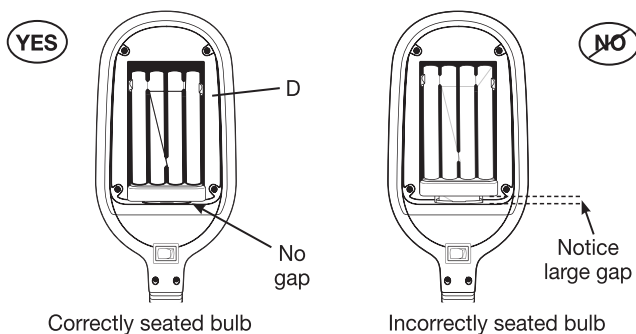


▲ CAUTION: ALWAYS UNPLUG LAMP BEFORE PERFORMING BULB REPLACEMENT OR INSTALLATION.

Assembly - Floor Light

Please follow the steps below to assemble your floor light. We recommend lying all the pieces on a large table or floor. You should not remove the polystyrene packaging from around the bulb until assembly is complete.

For ease of installation, please connect the components in the order suggested.

 1. Feed the **power cord** through the **pole** taking care that the cord runs from the top of the pole to the bottom (as marked on the pole). In some instances your power cord may be pre-installed.
2. Place the **base** on the floor and connect the **power cord** lock connectors to connectors on the **base**.
3. Holding the **pole** in one hand and the **neck** in the other, slide the bottom of the **pole** into the **base**, allowing any slack in the **power cord** to gather at the top of the **pole**.
4. Tuck any slack power cord into the top of the pole and insert the neck into the top of the pole.
5. Using the screws provided, fix the bottom and top of the pole where indicated.

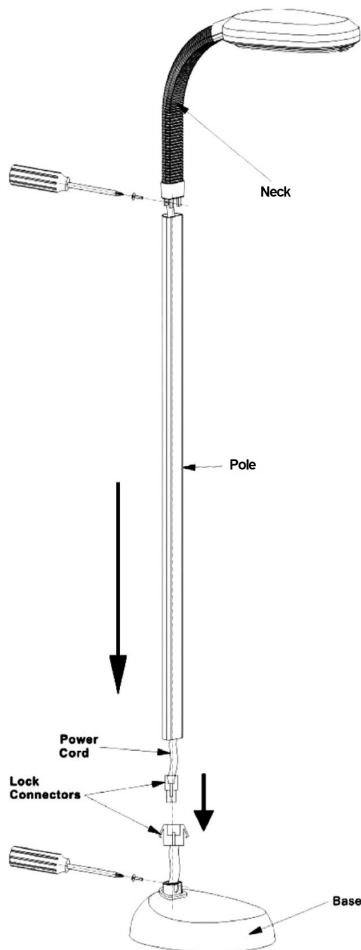


Operation

Please ensure that the bulb is free of packaging and is correctly seated before operating your lamp.

The lamp can be switched on and off using the **power switch** and the light directed by moving the **adjustable gooseneck**.


 
To replace the **bulb**, please refer to the 'How to look after' section of this instruction manual.

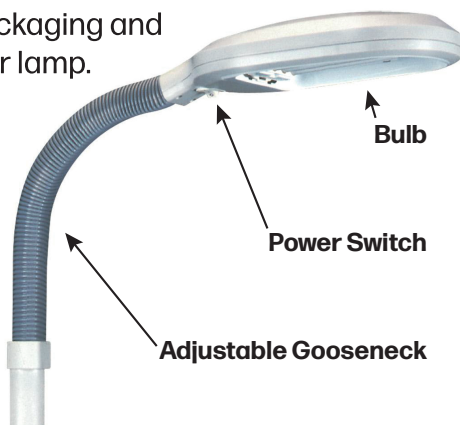

How to look after...

Replacing the Light Bulb

  Ensure the lamp is unplugged and the bulb is fully cooled before attempting replacement.

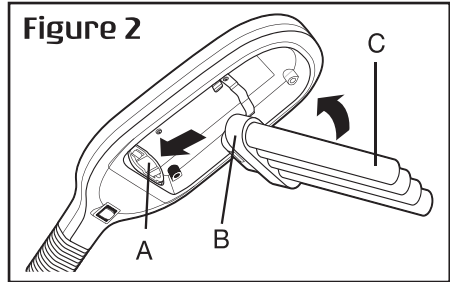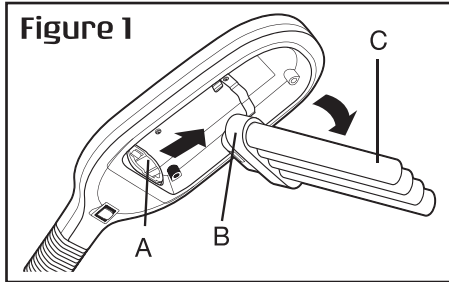

1. To remove the original bulb, firmly hold the base of the bulb (B) and pull horizontally from the socket (A) per figure 1.
2. Proceed to pull the bulb free of the retaining clips and dispose of the bulb carefully.
3. To replace with a new bulb, firmly hold the base of the bulb (B) and push horizontally into the socket (A) per figure 2.
4. Position the fitted bulb between the retaining clips, ensuring the bulb is firmly seated (see 'How to use - Assembly' section of this instruction manual).

Replacement Bulbs

Your lamp uses a 24W full spectrum tube. Replacement bulbs are available from Lifemax under reference 250A

Storage and Cleaning

Store the lamp in a dry location with moderate temperatures.

Unplug the lamp and allow it to cool before cleaning. The body of the lamp may be wiped clean with a damp cloth and the glass may be cleaned with a suitable glass cleaner. Take care to ensure no liquid enters the unit during cleaning. Avoid using abrasive chemicals, cleaning solvents or strong detergents.

Safety Information

1. Do not use this appliance in a hot or humid environment, such as bathroom or kitchen, or where there is evidence of damage to the case or components as this may result in malfunction or shock.
2. Take care when positioning the lamp to ensure it could not fall and injure someone and that the bulb does not concentrate heat on an adjacent surface.
3. Do not expose or store the appliance in excessive heat or direct sunlight.
4. Do not disassemble the lamp, it contains no user servicable parts.
5. This product is for indoor use only.

Warranty Information

Your Lifemax product is guaranteed for one year against defective parts or construction. This guarantee is from the date of purchase and is only valid with proof of purchase, Please note this guarantee does not cover normal wear and tear or damage caused by accident or maltreatment. The extended rights of this guarantee are in addition to the consumer statutory rights and do not limit the effect of these statutory rights. Please register your product at <https://www.lifemaxuk.co.uk/warranty>.

Technical Specification

Model No	2501 / 250.2	Weight	4,320g / 1,500g
Power	24W	Colour	White / Black
Rated Voltage	220-240V 50Hz 2A	Colour Temperature	6,500K



This is a WEEE symbol. It indicates that when the end-user discards this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved. Lifemax Ltd provide an end-of-life solution for this product when sold in the UK by accepting back any end of life items for processing by a local registered waste disposal company.

Lifemax Limited, 1 Pipers Court,
Thatcham, Berkshire, RG19 4ER

Lifemax (Ireland), 51 Bracken Road,
Sandyford, Dublin, D18 CV48

www.lifemaxuk.co.uk

Lifemax

Made In China

