
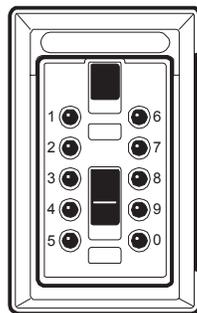


# How to Set the Code

Once you have opened your GE KeySafe™ from its packaging press the OPEN button down and free the lid from the vault.


*If this is not possible press the CLEAR button down first - you will find this below the OPEN button.*

With the lid in your hand you will notice the digits 1 to 5 down the left and 6 to ZERO down the right.

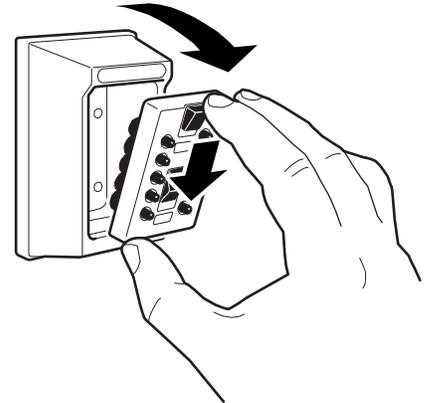


There is NO pre-set code and you will notice the OPEN button moves freely.

Turn the lid over in your hand and remove the white card. The white card is utilized to assist with the setting of your code and should not be discarded.

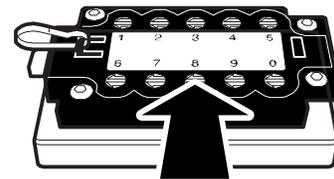


Set the new combination before placing lid on KeySafe. Lid will not close if combination is not set correctly. REMOVE THIS CARD TO SET COMBINATION.

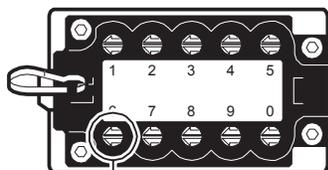

You will notice 10 numbered screws with an arrow on each of them. All arrows will be set to the OFF position.


Using the screwdriver tip on the white card push and turn the desired numbers within your code 180 degrees.

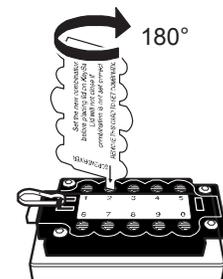

Supra UK Limited recommend you use between 5 and 7 digits. For the purpose of this clip we have only set the first 4. Now simply replace the card.


If you now press the OPEN button down you will notice movement is restricted. This is because a code has been set.

To check the code has been entered correctly simply press the buttons as set in your code. You will notice each digit will “CLICK” as it is pressed.

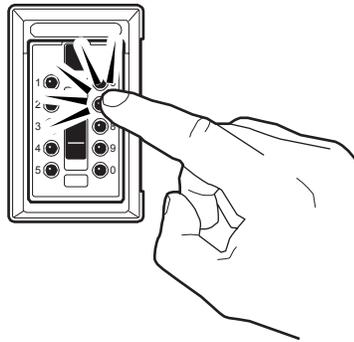

Now you have entered your correct code the OPEN Button will press down freely.

Attach your key to the key ring provided and ensure the key lies flat and that the key ring is not sticking out.

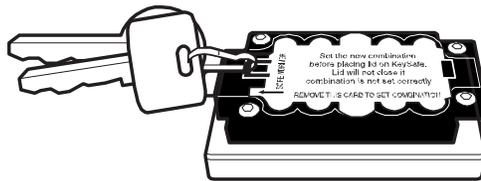

Simply offer the bottom of the lid into the aperture of the vault and re-enter your personally set code.

Should you make a mistake simply press the CLEAR button and start again!

Press and with the open button held down, secure the lid into the vault.