

Lifemax Magnifying Table Light



Thank you for purchasing the Lifemax Magnifying Table Light. Your Magnifying Light is ideal for precise work in the home, office, workshop or classroom. To get the best from your purchase, please carefully read the following instructions.



**Lifemax Ltd,
1 Pipers Court, Thatcham
RG19 4ER. United Kingdom.**

www.lifemaxuk.co.uk



Helpline: 01635 874323


Unpacking and setting up your light

- Remove all packaging materials and tape from your light;
- Avoid pulling the wiring when removing contents from the packaging or during installation;
- To ease transit, the Angle screw (see diagram) is loosened while packed. Adjust the base of the light to a suitable angle and, using a flat headed screwdriver (not supplied), gently tighten the Angle screw.




Using your light

- Place your light securely on a desk or table;
- Adjust the lamp head to the ideal angle;
- Plug the mains cable into a suitable socket and turn 'On' using the On/Off switch (see diagram);
- To use the magnification feature, lift the Lens cover.

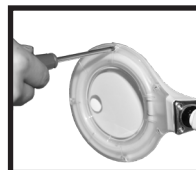

Replacing the light bulb (see images

- Ensure the bulb is fully cooled and the light is unplugged before replacing.
- Using a suitable cross-headed screwdriver (not supplied), unscrew the five screws on underside of the lamp;
- Remove the cover by lowering gently downwards. The cover carries the magnification lens and this may come away with the cover. Take care not to damage the lens or bulb;
- Gently pull the bulb downwards, taking care that the

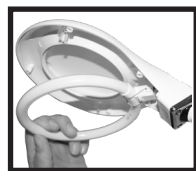

clips at each side of the bulb come free. Do not use excessive force on the bulb to avoid breakage and serious injury;

- Focusing on the power connector, slide the silver clip forwards and unplug the four pin connector from the bulb;

To purchase replacement bulbs directly from Lifemax call 01635874323 or visiting www.lifemaxdirect.co.uk

- Plug the new bulb into the four pin connector and slide the silver clip back to secure the bulb;
 - Gently push the bulb into the clips at each side of the bulb;
 - Refit the lamp cover and replace the five screws.
- Cleaning**
- Wipe clean with a soft cloth. Do not use polishers/ cleaners.

Replacement Bulbs

Your light uses 12W full spectrum tube with a 5.5" outer diameter with a G10q connector. Replacements are available from Lifemax under reference 1145A. Please see details overleaf.

In the unlikely event that your Lifemax Magnifying Table Light develops a manufacturing fault, it is covered by a three year return to base warranty. Your warranty is only valid with the original receipt, please ensure you keep this safe. The warranty runs for 36 months from the date of purchase.

If your product develops a defect during the warranty period, please call the helpline number for further advice. If instructed, please securely pack your item and return enclosing your contact details, your proof of purchase and fault details.

We will, at our discretion, repair or exchange the item in line with warranty legislation. Where no proof of purchase is provided, or the product is outside the warranty period, repairs/replacements will be offered at cost to the customer.


Your warranty does not cover consumables (bulbs), misuse or customer damage and will be deemed void where the repairs have been attempted by a unauthorised agent. This does not affect your statutory rights.

Important

- For indoor use only;
- Environmental Temp: -5~40 °C, Humidity: <95%.
- Do not disassemble the light unless you are a qualified electrician. Damaged cables should be replaced by a professional.
- Remove mains plug and allow to cool before maintenance.



This is the WEEE symbol. It indicates that when the end-user discards this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved. Lifemax Ltd provide an end-of-life solution for this product when sold in the UK by accepting back any end of life items for processing by a local registered waste disposal company.

 The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.